BLUETOOTH ACTIVE LOUDSPEAKERS

USER MANUAL

M-BTS50.B
M-BTS50.W

Bluetooth®

MACROM

EN

Table of contents

Warranty	3
Safety information	3
Specifications	3
Product overview	4
Product installation	5
Switch On/Off	5
Pairing and connecting with a Bluetooth device	6
Re-connecting with a Bluetooth device	6
Connecting with a wired device	6
Adjust the Volume	6
Remote control a Bluetooth music player	7
Charging a device from USB port	7
Product care	7

Warranty

Thank you for purchasing this Macrom product. Should your product need warranty service, please return it to the shop where you buy it or to the Macrom distributor in your country. The warranty does not cover damage due to improper use and or installation, incorrect connections to power supply and audio video sources, exposure to excessive humidity, unauthorized repair attempts or modifications.

Safety information

This product should be operated only with the type of power source indicated by the marking on the back of the product. If you are not sure of the type of power supply in your home, consult your product dealer. The product is not required to be grounded. Ensure the plug is fully inserted into the wall outlet or extension cord plug to prevent pin exposure. When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance, it should be fitted with the appropriate molded plugs and carry safety approval appropriate to the country of use. Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them. Do not overload wall outlets, extension cords or multiple sockets, as this can result in a risk of fire or electric shock. The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc. The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.

Specifications

M-BTS50 can play music from a compatible music players using the Bluetooth connection or the audio input . The operating range in Bluetooth mode is within 10 meters. M-BTS50 is compliant with the following Bluetooth® specifications: Bluetooth V2.1 + EDR and supports A2DP and AVRCP profiles. Power supply input 100-240 V AC – 50/60 Hz – 850 mA. Power consumption 85W. Output power 100 Watt (18W RMS x 2). Signal to noise ratio **>** 70dB. Channel separation **>** 60dB Total harmonic distortions **<**0,5 % a 1W 1KHz.

Product overview

Top overview

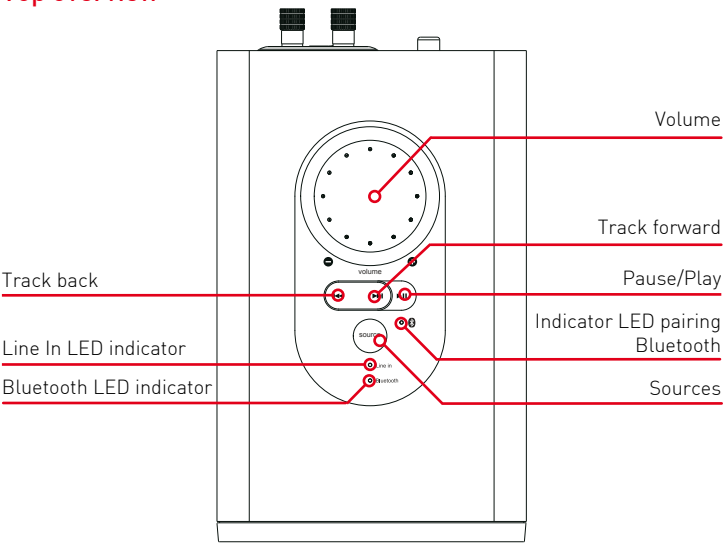

Back overview

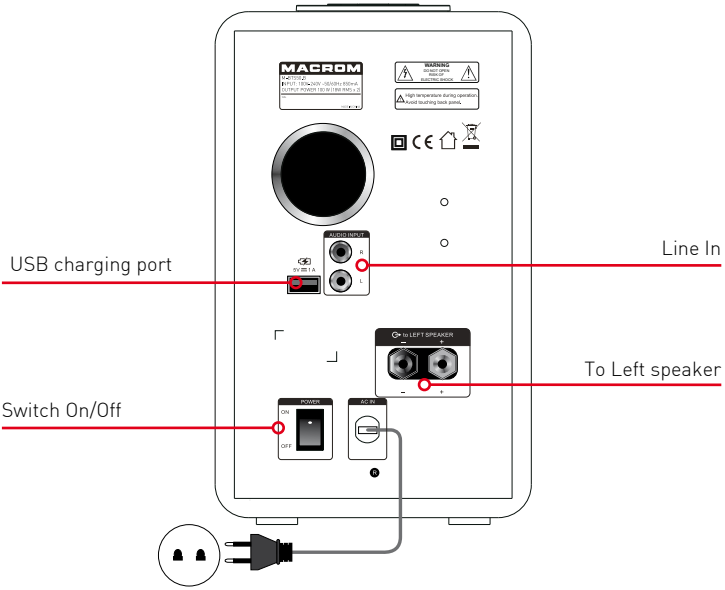

Product installation

Connect the left and right speakers using the connection cable provided with the product, pay attention to respect cable polarity and remember to strip the cable leads before to connect them. Connect the power supply plug. For an optimal listening of music speakers should be located approximately at the same height of your head and centred to the main listening position.

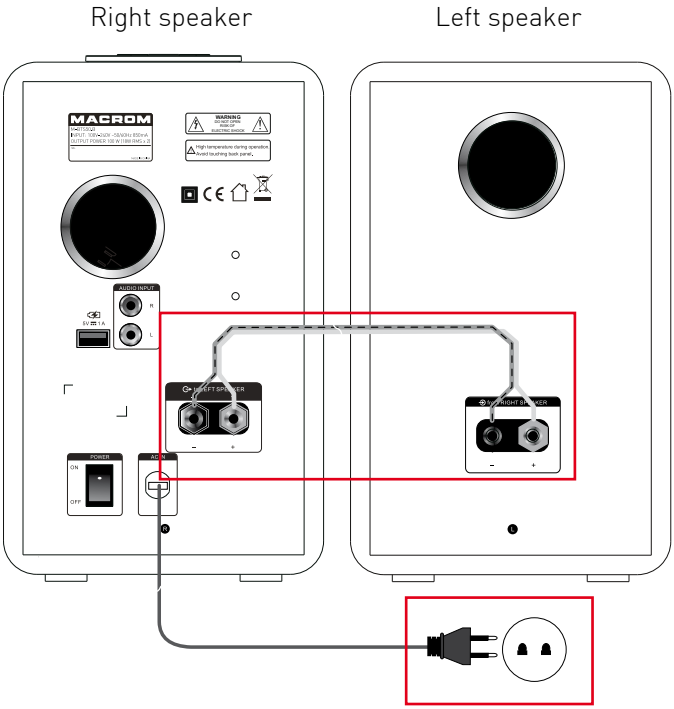

Switch On/Off

To Switch on and off the product use the power switch located on the back of right speakers. Remember to power off the product if not in use.

Pairing and connecting with a Bluetooth device

Switch on the product, the Bluetooth LED lit up in blue, and the pairing sequence starts after 10 seconds. When ready to be paired the Bluetoot LED blinks red and blue rapidly. The Bluetooth mode is the default source selection. Than from the Bluetooth function of the device to be paired search for new device named "M-BTS50". Select it and if requested enter "0000" passcode. When pairing is completed successfully the Bluetooth LED is blue and the product prompts a tone. If the pairing procedure is not successful, please switch off the product and repeat the above steps. The specific pairing procedure may vary, so please refer to your device user manual for further information.

Re-connecting with a Bluetooth device

Every time the product is switched on, it will connect to the last connected device automatically.

Connecting with a wired audio device

Switch on the product. Connect the audio RCA/ Jack cable provided with the product to the audio input RCA connectors located on the back of right speaker. Connect the other end of the cable to an audio source (i.e. headphone connector). Press once the source key on the top of the right speaker.

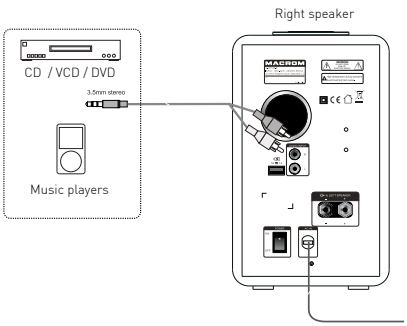

Adjust the Volume

To adjust the volume while listening to music turn the volume knob. When powered on the product will maintain the last selected volume level. Please remember that excessive sound pressure from speakers can damage your hearing.

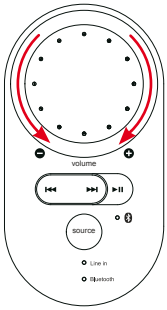

Remote control a Bluetooth music player

Connect the product to a compatible music player that supports A2DP profile. Please note that the music functions available depends on your music player. To manage music from the product refer to the commands below:

- Pause/Play: Short press ⏯ key.
- Track back: Short press ⏮ key.
- Track forward: Short press ⏭ key.

Charging a device from the USB port

The USB charge port located on the back of the right speaker can be used to charge any USB type A compatible device. Power supplied is 5V 1A.

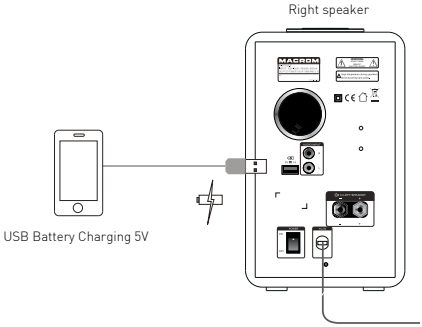

Product care

Please remember that your Macrom product is an electronic device, and so needs to be treated with care:

- Do not subject it to mechanical shock or vibrations.
- Do not subject it to excessive heat.
- Keep it away from water and excessively humid areas.
- Keep it away from high electromagnetic fields.

There are no user-serviceable parts inside. Opening the product or try to repair it will terminate the warranty.

The BLUETOOTH ® worldmark and logos are registered trademarks owned by the Bluetooth SIG, Inc and any use of such marks by ALDINET S.p.A. is under license.

The MACROM brand is a registered trademark of ALDINET S.p.A.

CE

Declaration of Conformity

MACROM

ALDINET S.p.A
Viale C. Colombo, 8 - 20090 Trezzano s/N (MI) - Itlaly
Tel. +39 02 484781

w w w . m a c r o m . i t